



CUSPIDI TEMPRATI PER GRIFFE HARD INSERTS

► UGE 10 - ART. 3585

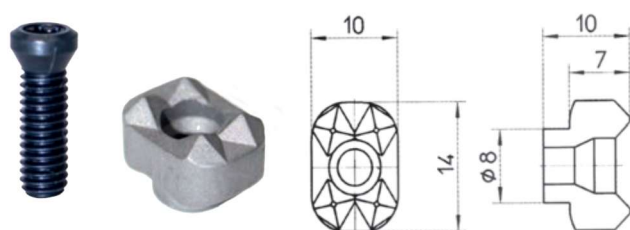


Esempio d'impiego Usage example

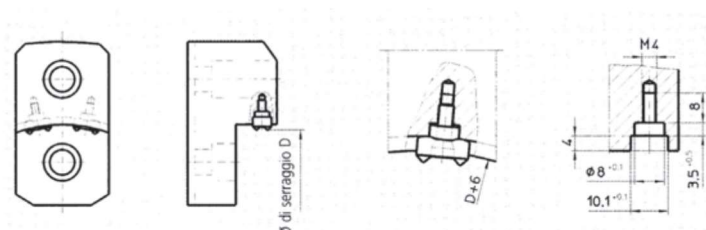

► UGE 20 - ART. 3586



Esempio d'impiego Usage example

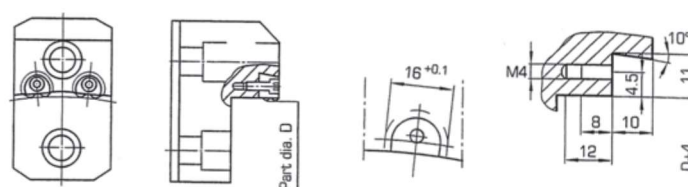


► ART. 3588

Fresa necessaria per creare sede
per inserimento UGE 20


Milling cutter required to create a
suitable recess to install UGE 20




Disegno tecnico Technical drawing

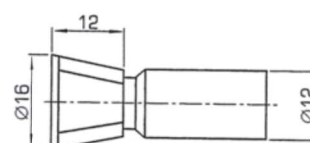


► UGE 30 - ART. 3587

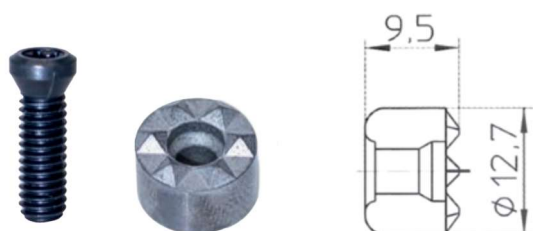

Esempio d'impiego Usage example

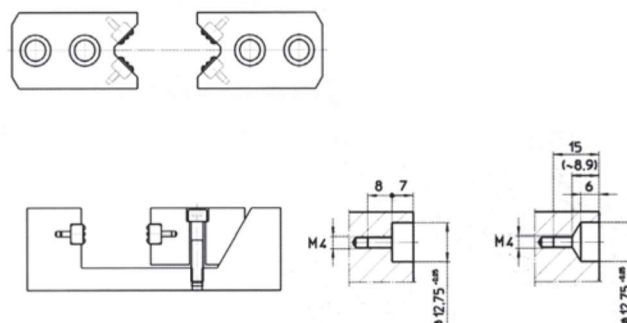


► UGE 40

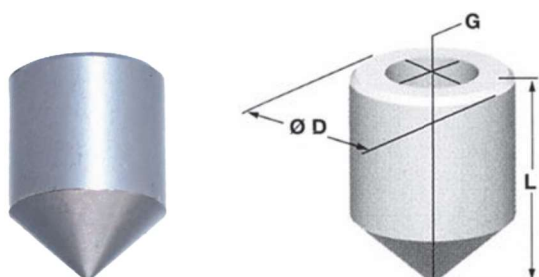

ART.	Ø D	L	G	Peso Kg CAD. PZ Weight Kg per piece
3531	6	10	M 3	0,016
3532	8	12	M 4	0,038
3533	10	14	M 5	0,036
3534	12	16	M 6	0,036
3535	12,7	16	M 6	0,075

► UGE 50

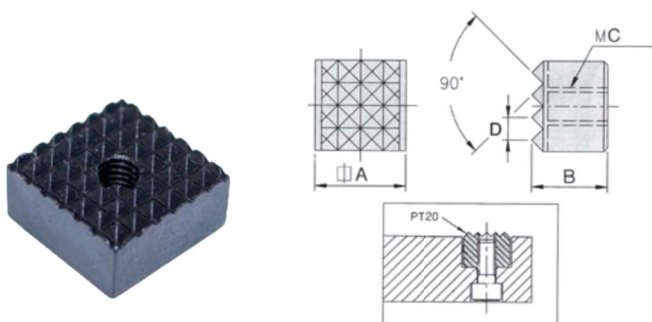

ART.	Ø A	B	C	D	Peso Kg CAD. PZ Weight Kg per piece
PT20-1010	10	10	M5	2,3	0,008
PT20-1210	12	10	M6	3	0,010
PT20-2010	20	10	M6	3	0,030
PT20-2510	25	10	M6	3	0,043